
LOST VAPE

www.lostvape.com

linktr.ee/lostvapetech

LOST VAPE

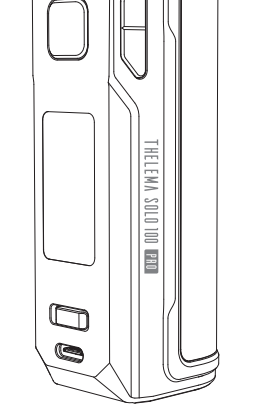

THELEMA SOLO 100 PRO BOX MOD

USER MANUAL

SAFETY WARNINGS

1.Warning for vulnerable consumer groups: This product is not recommended for minors, pregnant or breastfeeding women, or anyone at risk of heart disease, depression, and asthma.

2.Battery Caution:

>Make sure the battery is undamaged and completely wrapped.

>Get batteries only from specialized shops and always use matched battery pairs.

>Do not sub-ohm vaping without high-discharge(>25A) battery.

>Do not expose the device to extreme temperatures.

>Do not disassemble the device without Lost Vape's recommendation.

3.Tank Attention: Do not dry burn the tank or coil. It is essential to prime a new coil. Fill your tank with e-liquid and leave it to stand for at least 5 minutes before vaping. As above, this will allow the cotton inside your new coil to absorb plenty of e-liquid ready for that first, tasty vape. All cartridges/coils are not covered under warranty once they are opened, used, or filled with liquids.

4.Warranty: The device is covered by a 3-month warranty from the date of purchase.

5.Contacts: For further questions or inquiries, please contact Lost Vape by email at support@lostvape.com or visit our website: www.lostvape.com.

PRODUCT DESCRIPTION

● BASIC PARAMETERS

Dimensions	39.6*28.2*97.3mm
Net Weight	150g±5g
Vaping Mode	WATT/BOOST/SS316/TI/NI/VOLTAGE
Battery	Single 18650/21700 High-discharge Battery(>25A), 3.7V(Not Included)
Power Range	5W-100W
Output Voltage	0.7V-8V
Coil Resistance Supported	0.1Ω-3Ω
Type-C Cable	Support 5V/2A Charger
Display Size	1.47" TFT Display Screen
Material	Zinc-Alloy & PU Leather

● COMPONENTS OVERVIEW

510 Connector / "+" Button / "-" Button / Fire Button / 1.47" TFT Display Screen / Battery Cover / On/Off Button / Type-C Port

● MAIN INTERFACE OVERVIEW

Battery Level / Resistance / Vaping Mode (WATT / BOOST / SS316 / TI / NI / VOLTAGE) / Vaping Mode Parameter (Wattage/ Temperature /Voltage) / Voltage / Puff Time / Puff Counter

BASIC OPERATION

● BATTERY INSTALLATION

1.Remove the battery cover.

2.Insert a 18650/21700 battery according to the positive and negative symbols on the tray.

3. Place the battery cover back onto the device.

● TURN ON/TURN OFF

Push Left ←Turn on the device

Push Right→Turn off the device

● MENU OPERATION

Access Menu: Press the Fire Button 3 times to access the Primary Menu. Use the (+)/(-) buttons to choose the functions and press the Fire Button to confirm.

Exit: In any Primary Menu / Secondary Menu, long press Fire Button for 1.5 seconds to return directly to the Main Interface.

○ **Professional:** Select your preferred vaping mode (WATT/BOOST/SS316/TI/NI/VOLTAGE).

○ **Clear:** Reset the puff count.

○ **Theme:** Switch between 9 interface themes using the (+)/(-) buttons.

○ **Power Lock:** Lock or unlock the power using the (+)/(-) buttons.

○ **Screen Setting:**
- **Brightness:** Level 1–5 (default: 3). Press "+" to increase and loops back to 1 after 5. Press the Fire Button confirm to return.
- **Screen Time:** 3–30s (default: 20s). Press "-" to increase and loops back to 3s after 30s. Press the Fire Button confirm to return.

○ **Reset:** Restore factory settings using the (+)/(-) buttons.

● VAPING MODE SWITCH

Press the Fire Button three times to enter the Primary Menu and select the "Professional" option. Press the Fire Button to confirm and access the Secondary Menu for vaping modes (WATT/ BOOST/ SS316/ TI/ NI/ VOLTAGE). Use the (+)/(-) buttons to choose your desired vaping mode, then confirm by Fire Button and return to the main interface, where the selected mode and previously adjusted parameters are displayed.

1)WATT MODE

· Power Adjustment Range: 5W-200W.

· Short press the (+)/(-) button to increment/decrease power by step (The incremental/decreased steps: 0-20W 0.1W, 20W-100W 0.5W, 100W-200W 1W); long press for rapid incrementation /decrement.

When it reaches the maximum power limit, stop pressing the button to retain at maximum power value. Short press the button again to return to minimum power value.

2)BOOST MODE

Power adjustment works like WATT mode, but unleashes a power burst for stronger, faster, and more intense vaping.

3)TEMPERATURE CONTROL MODE: SS316/TI/NI

· Temperature Range: 100–315°C or 200–600°F. The output power is fixed in these 3 temperature control modes.

· Short press the (+)/(-) button to adjust in 5°C or 5°F increments; long press for rapid changes till the limit.

· Switch Between °C and °F: Long press the (+)/(-) button to the minimum/maximum value and release. Then pressing button again cycles to the minimum value of the alternate unit.

4)VOLTAGE MODE

· Voltage Adjustment Range: 0.7V-8.0V.

· Short press the (+)/(-) button to increment/decrease Voltage by 0.1V step. Long press for rapid adjustment. When it reaches the maximum voltage value, stop pressing the button to retain at maximum voltage value. Short press the button again to return to minimum voltage value.

● POWER LOCKED/UNLOCK

Long press the (+) and (-) buttons for 3s on the Main Interface simultaneously, or access the Primary Menu and select "Power Lock" to lock/unlock the power. The Fire Button remains functional in this mode.

● PUFF TIME / PUFF COUNT

· Puff time is displayed after each vaping session.

· The puff count displays up to 9999. Access the Primary Menu and select "Clear" to reset the puff count.

● CHARGING

· Vaping via the Fire Button is allowed while charging.

· Pressing the Fire Button/(-)/(+) during charging will bring up the Main Interface.

WARNING DESCRIPTION


LOW BATTERY	When one battery level drops to 0%, the output is automatically cut off.	OVER 10S	The vaping time for once is exceeded.
CHECK ATOMIZER	The cartridge is undetected.	SHORT CIRCUIT	There's a short circuit issue.
TOO HOT	The internal temperature exceeds 85°C and your device will be disable temporarily. It will resume when the device cools down.		

LOST VAPE

www.lostvape.com

linktr.ee/lostvapetech

LOST VAPE

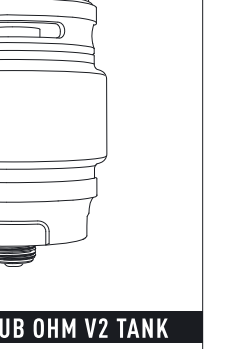

CENTAURUS SUB OHM V2 TANK

USER MANUAL

SAFETY WARNINGS

1. Warning for vulnerable consumer groups: This product is not recommended for minors, pregnant or breast-feeding women or anyone at risk of heart disease, depression and asthma.

2. Atomizer Caution: Don't over-tighten the atomizer onto the 510 connector, the atomizer should be snugged, not tightened. Over-tightening may cause damage to the threading and the Delrin insulator.

3. Warranty: The device is covered by a 3-month warranty from the date of purchase.

4. Contacts: For further questions or inquiries, please contact Lost Vape at support@lostvape.com or visit our website:www.lostvape.com.

BASIC PARAMETERS

Size	φ30.0*58.5mm(5ml) φ26.8*58.5mm(3ml)
Tank Capacity	5ML (2ml for all TPD versions)
Body Material	SUS303,GLASS TUBE
Compatible With UB Max Coils	UB MAX X1 Coil V2 Edition（0.15Ω）
	UB MAX X2 Coil V2 Edition（0.2Ω）
	UB MAX X3 Coil V2 Edition（0.3Ω）

PRODUCT DESCRIPTION

Childproof Lock / 810 Drip Tip / Airflow Control / Chamber / Top Fill Chimney / Mesh Coil / Silica Glass / Base / Gold Plated Positive Pin

BASIC OPERATION

● FILLING THE E-LIQUID

1. Press and hold the Childproof Lock while turning counterclockwise to open the top cover.

2. Fill the pod tank through the e-liquid filling slot.

3. Replace the top cover and turn clockwise to secure it.

4. Wait 5 minutes after filling before using the device.

● INSTALL THE COIL

1. Twist the pod tank out from the base.

2. Take out the coil.

3. Push the coil back into the pod tank.

4.Twist the pod tank back onto the airflow control base.

● FOR AIRFLOW CONTROL MODE

Turn the Airflow Control ring all the way to the right for airflow restricted, select your preference and enjoy.

ATTENTION

1.When installing a new coil, let the tank stand for 5 minutes after filling so the cotton can be fully saturated with e-liquid before use.

2.Do not let the tank become completely empty when using.

3.Refill the tank to avoid dry burning or damage to the coil.

4.Make sure the pod tank is upside down before pulling out the coil when there is juice still left in the pod tank to avoid leakage of the e-liquid.